 


2D Barcode Scanner

Quick Start Guide

System Settings



Factory Defaults



Version

Communication Interface



USB Mode**



TTL/RS232 Mode

Reading Mode



Manual Mode**



Sense Mode

Baud Rate



9600**



115200

Suffix Settings



Add CR**



Add CR+LF



Add Tab(HT)



NONE

Sound Settings



Enable Sound**



Disable Sound

Data Format



GB2312



Unicode(UTF-8)

Other Settings



Enable All Barcode



Enable All 1D Barcode



Enable All 2D Barcode



Read Regular And Inverse
Barcode

Warranty Card

User Name:
Telephone Number:
Address:
Product Name:
Model NO.:
Product Serial Number:
Purchase Date:
Problem Description:

Certificate

Product Name:
Model NO.:
Product Serial Number:
Date of Production:
Inspector:

The products meet the company's quality standards and industry stan- dards, and the products are qualified.